



GEN X OBDII with Y-Cable Installation Guide




Step 3: The Male Connector must be inserted into the main vehicle connector that is found under the dash



Step 1: Connect the OBDII cable to the modem, then to the end of the Y cable

Step 2: Replace original connector in vehicle with the same female connector of the Y cable

Y Cable

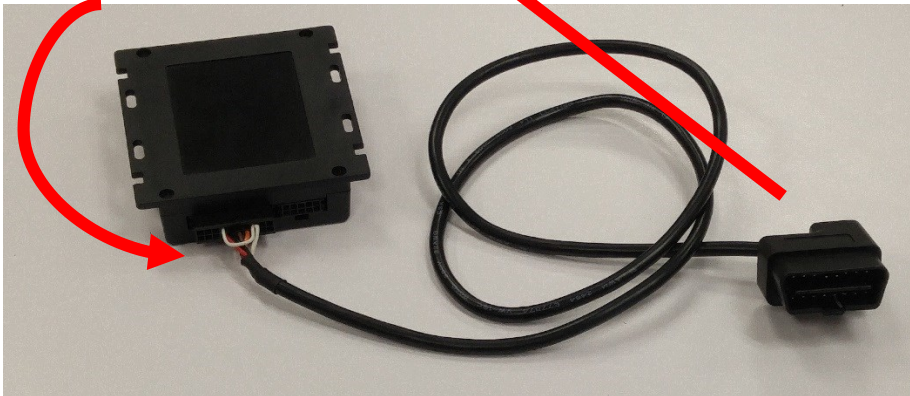

FLEET FREEDOM®

630 The East Mall, Etobicoke ON M9B 4B1 -

www.fleetfreedom.com

Fleet Freedom Support Phone Number: 1 (866) 787-2548 Option 2 English or 9 French

Email: support@fleetfreedom.com

**Install Verification:**

Green LED should be flashing rapidly when ignition is on and slowly when ignition is off

Note: If possible, move the modem to the highest point under the dash close to the window and secure in place with tie wraps. Don't forget to put tie wraps on cables under the dash. Be sure there are no metal obstructions. Plastic material doesn't interfere with cellular and GPS signals. Antennas are built-in for easy installation

If you need assistance with your Account, please contact one of our Customer Service Representatives.

Office Hours: Monday to Friday 9:00 AM - 5:00 PM EST

Fleet Freedom Support Phone Number: 1 (866) 787-2548 Option 2 English or 9 French

Email: support@fleetfreedom.com



630 The East Mall, Etobicoke ON M9B 4B1 -

www.fleetfreedom.com

Fleet Freedom Support Phone Number: 1 (866) 787-2548 Option 2 English or 9 French

Email: support@fleetfreedom.com